


## Mercedes/Dodge Sprinter Front Strut Installation Warning

**Note – this is not intended to be comprehensive installation instructions; refer to the factory service manual for complete instructions.**

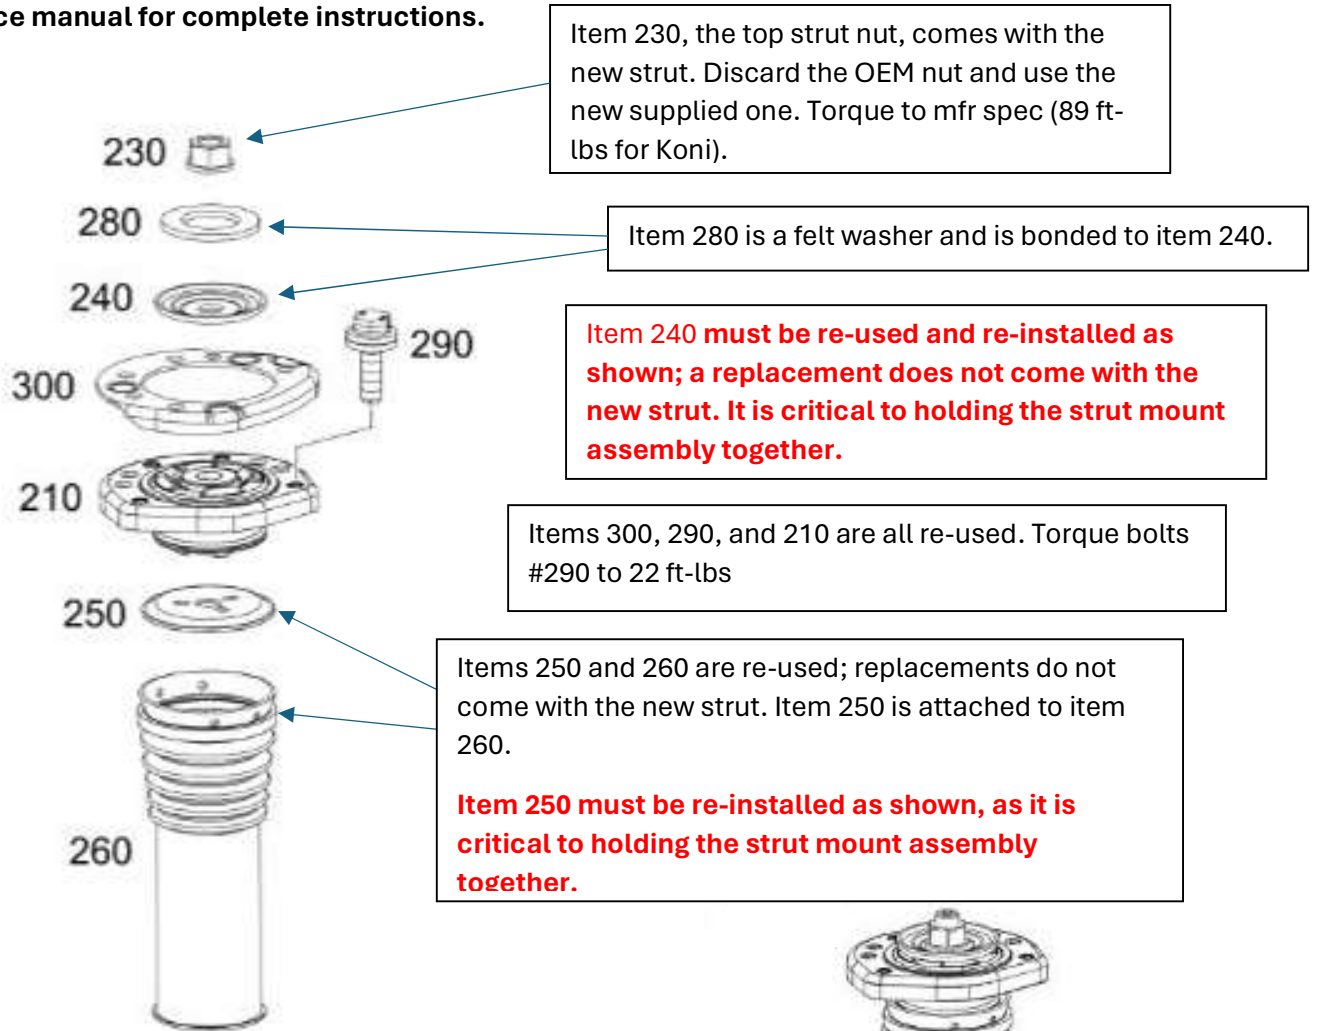

Complete strut assembly shown at right. (top plate Item 300 and mounting screws Item 290 not shown, but these must also be re-installed if they were removed).

Torque bolts 340 and 350 to 103.3 ft-lbs, then another 120 degrees.

